




01 Rotate the support foot 90° (perpendicular) to the Metro's base.

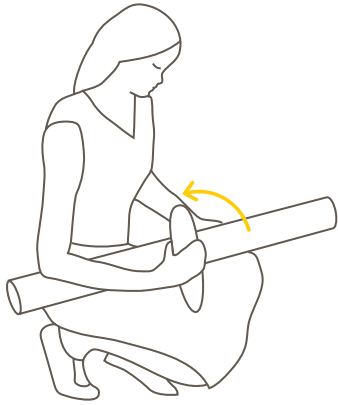

02 Unfold and assemble the 2-piece pole sections. Insert the pole assembly into the hole on the back of the support foot.

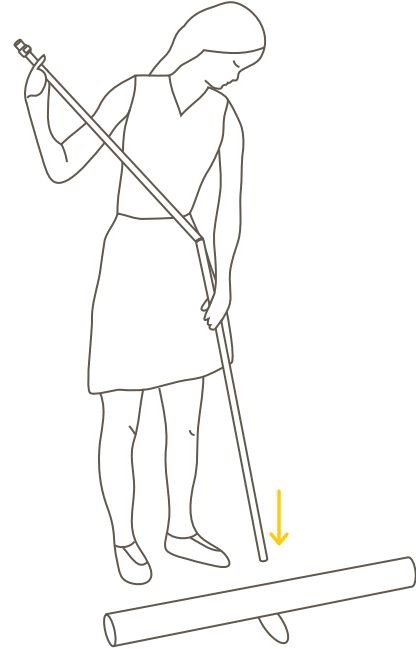

03 Pull the graphic panel out of the base and insert the black plastic clip on the top of the pole into the groove of the upper graphic profile & align with blue dot. Pull up the telescopic pole section and lock in place at the 80" mark.

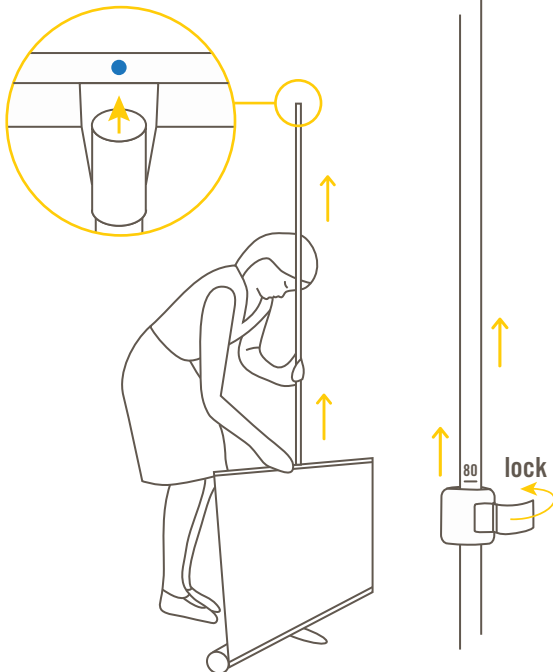

04 Assembly is complete.

